6.0 Prioris XL/XLDP Server-Specific Information

This portion of the README file provides information specific to the Prioris XL and XLDP servers.

6.1 Server-Specific Contents

CONTENTS

- 7.0 Quick Launch Software
 - 7.1 Minimum BIOS & System Configuration Utility (SCU) Levels
- 8.0 Operating Systems
 - 8.1 Windows NT 8.1.1 Windows NT 4.0 Bootable CD-ROM
 - 8.2 SCO 8.2.1 Graphics Resolution
- 7.0 QUICK LAUNCH SOFTWARE

7.1 Minimum BIOS & System Configuration Utility (SCU) Levels

This version of Quick Launch requires the following minimum system software:

BIOS: 2.08 SCU: 1.12

Adaptec BIOS version V1.22S.01 or later (support for the bootable CD-ROM when connected to the on-board Adaptec 7870 controller).

BIOS and SCU updates are available on the Internet; refer to section 1.0.

8.0 OPERATING SYSTEMS

- 8.1 Windows NT
 - 8.1.1 Windows NT 4.0 Bootable CD-ROM

The XL does not support installation of NT 4.0 using the NT bootable CD-ROM. You can install NT 4.0 either by doing an Express Installation using the Quick Launch CD-ROM, or by using bootable floppies and the CD-ROM provided by Microsoft.

- 8.2 SCO
- Graphics Resolution 8.2.1

To increase graphics resolution to 800 X 600, 256 color, run "mkdev graphics" for ODT, or "scoadmin video" for OpenServer 5, and choose Cirrus Logic GD542X as the video chip.